256 GPM Suction Flow Installation Instructions

Packaging and Installation Instructions - SAVE INSTRUCTIONS

Instructions

- 1. For multiple drain use only in self-contained factory manufactured spas.
- 2. Do not try to locate suction outlets on seating areas or on the brackets for such seating areas.
- 3. When two or more suction fittings are used on a common suction line they shall be separated by a minimum of 3 ft. (91.44 cm); or, if any are located closer, they shall be located on two different planes (i.e., one each on two separate vertical walls). Confirm with local and national codes and standards for proper installation.
- 4. In the event of one suction outlet being completely blocked, the remaining suction outlets serving that system shall have a flow rating capable of the full flow of the pump(s) for the specific suction system.
- 5. Maximum flow rating with head loss curve: 256 GPM with vacuum tube.
- 6. Acceptable connecting pipe size(s) maximum 2.5" dia.
- 7. Mounting position: wall only
- 8. Suction outlet part number 30240-U applicable.
- Part numbers for 256 GPM configuration: (Replace within seven installed years) 30240U-XX VGB 2008 256 / 179 GPM suction cover & Screw/UV 30341 VGB 2008 256GPM Buttress suction wall fitting x custom slip 30167-V 2" SPG x Custom SPG x 3/4" smooth barb vacuum tube adapter 30169-V 2.5" SPG x Custom SPG x 3/4" smooth barb vacuum tube adapter 30234-V Suction L gasket use 3.75" hole size 30236-V Suction flat gasket use 3.63" hole saw 30239-V Suction nut 30238-V Compensating ring 63414 3/4" ID x 1" OD Tubing 8ft long
- 10. Tools required: Philips screw driver, glue for plumbing connections, clamp & pliers for tubing connections.
- 11. Service and winterizing instructions.
 - a. Service remove screw. Remove cover. Place suction cover on wall fitting with blank portion, no holes pointed down. The keyway on inside cover must match the notch on the wall fitting. Insert stainless steel screw in cover and tighten securely. Do not overtighten (as plastic will strip).
 - b. Winterizing Drain suction line thoroughly and blow out all remaining water. See spa manufacturer instructions for winterizing.
- 12. WARNING: Do not exceed the maximum allowable flow rate stated on the suction fitting.
- 13. The suction fitting including fasteners should be observed for damage or tampering before each use of this facility. *Note:* Missing, broken, or cracked suction fittings shall be replaced before using this facility. Loose suction fittings shall be reattached or replaced before using this facility. Read, then keep these instructions for future reference.

Caution: Be aware that changing pump types and sizes can increase flow rate. The maximum flow rate is 256 GPM with vacuum tube.



256 GPM Suction Installation Instructions




Step One

Do not locate suction outlets on seating areas or on the brackets for such areas.

Step Two

Cut a 3.5° hole into the spa wall for a flat gasket. Cut a 3.63° hole into the spa wall for a L gasket.

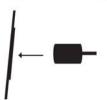


Step Three

Back face the backside of the wall as necessary so that it is parallel to the front side of the wall.



Step Four

Place gasket on 256 GPM wall fitting 30341.

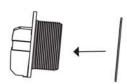

Step Five Place 256 GPM wall fitting 30341 through the hole.




Step Six Orient the tab down / Note wording "INSTALL ARROW UP."

Step Seven

Place the compensating ring on the wall fitting with the flat side against the wall.




Step Eight Thread nut onto the wall fitting

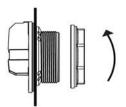

Step Nine Tighten nut securely

Step Ten

Glue adaptor into wall fitting socket with 0.75" smooth barb or 0.5" socket facing up

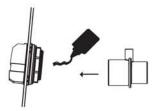

Step Eleven Attach schedule 40 plumbing to the 30167-V (2"S) or 30169-V (2.5"S) adapter.



Step Twelve

A tubing resistant to kink or pinching shall be used (or provided) for use with the suction adaptor. Attach the provided tubing 0.75" to the smooth barb on the adaptor fitting with glue and a clamp to secure.



Step Thirteen Run 0.75" vinyl tubing above the highest possible water level, creating a Hartford loop, and attach securely.



Step Fourteen

Place suction cover on wall fitting with blank portion (no holes) pointed down. The keyway on inside cover must match with tab on wall fitting.



Step Fifteen Insert stainless steel screw in cover and tighten securely. (Do not over-tighten plastic will strip).

