


# VL600 Cutout Template

Drill a .5" hole on the kerf of the center hole.  
This will clear chips from the hole saw and speed the drilling of the first (center) hole.

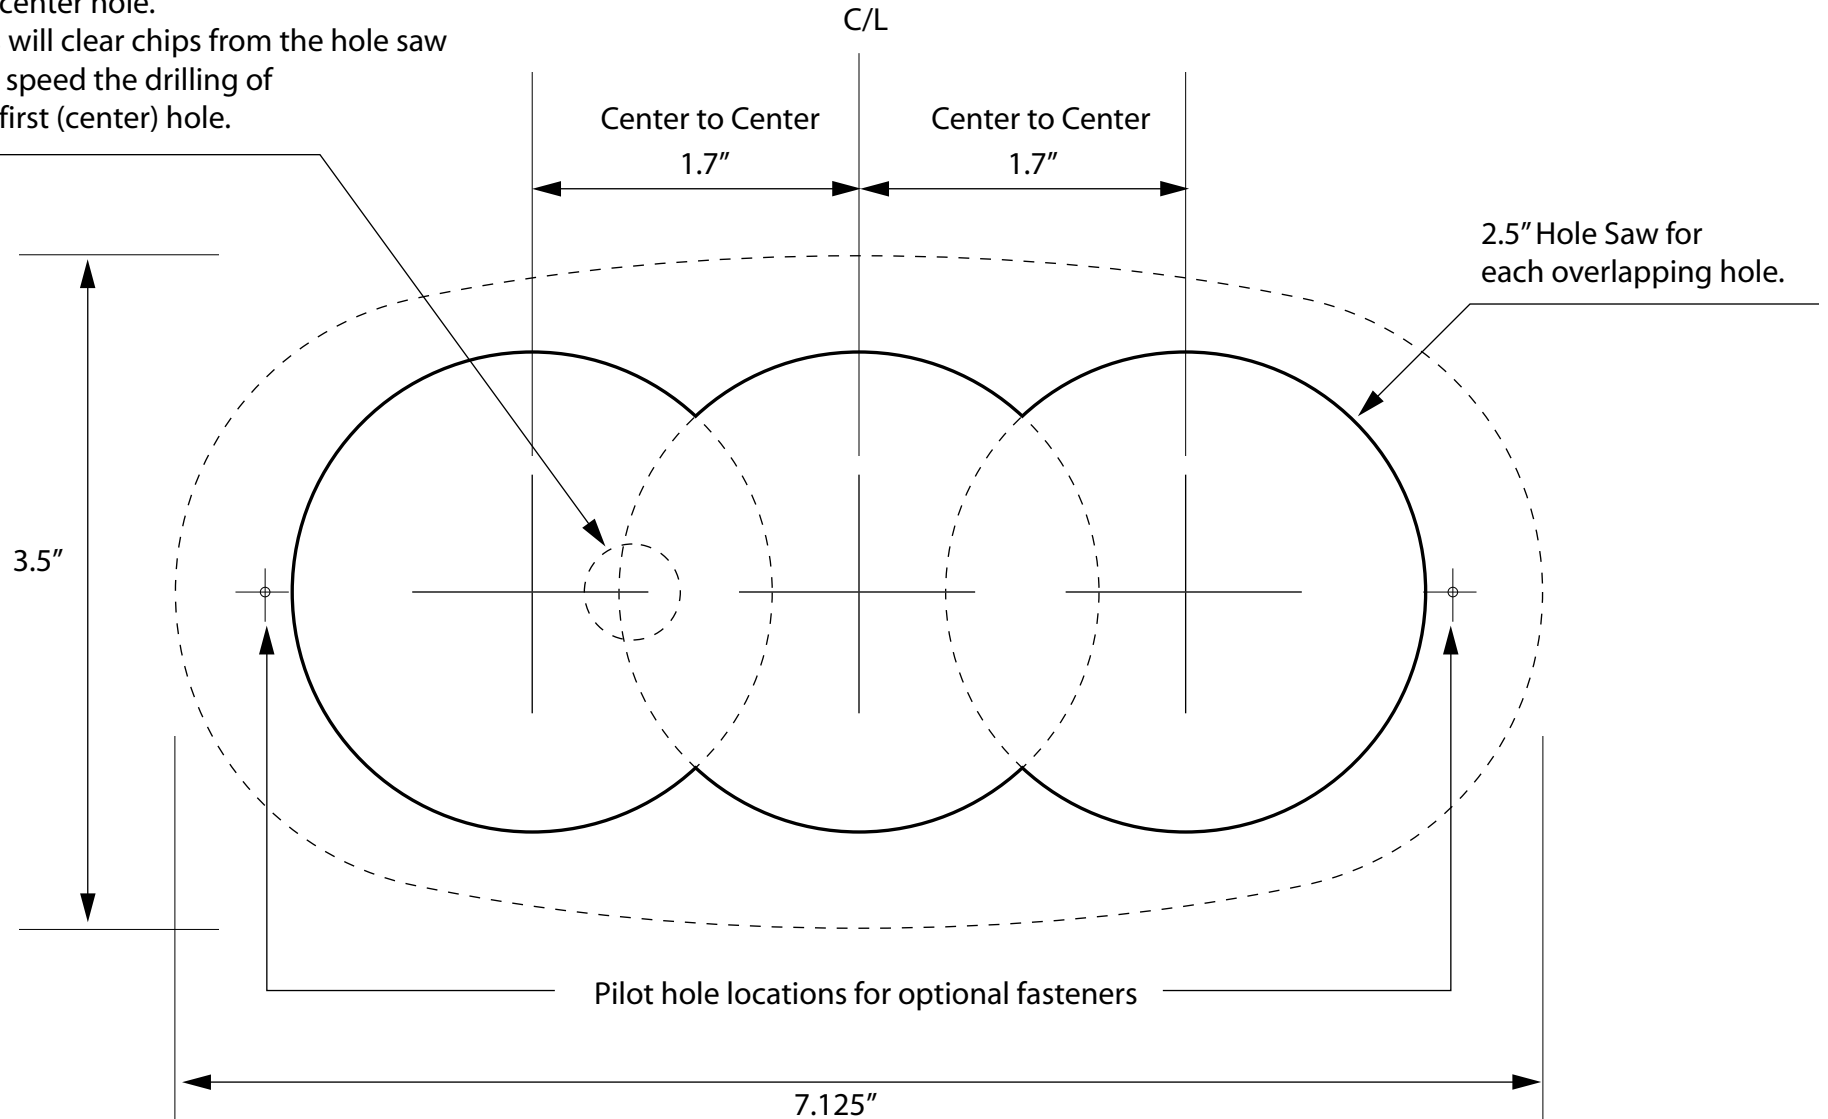

Note:  
To print actual size, set Page Scaling to NONE in the Acrobat print dialog.