BP21P4BC Tech Sheet

Customer: Balboa Water Group

Part Number: 56625 800 Incoloy 3kW

56626 825 Incoloy 3kW

56627 Titanium 3kW

Custom Box Overlay

Box Overlay Part Number N/A

CE System Model: BP21-BP21P4BC-RCA3.0K

Software Version ID: M100_225 V20.0

Software Version: 20.0

File Name: BP2100_20.0_BP21P4BC.hex

Configuration Signature: E8D7A005

Eng. Project Number: 4248

Control Panels:

TP800 version 3.1 or later (Version 3.13 or later required for bba™)
TP900 version 3.1 or later (Version 3.13 or later required for bba™)





System Revision History

Part #	EPN	Date	Originator	Changes Made
ZT000084	4248	04-10-14	BWG	New generic BP2100 with 4 Pumps plus optional blower and/or Circ.
56625,	4248	05-01-14	BWG	Released to production.
56626,				
56627				

bba™ (Balboa Bluetooth Amp) connection is documented seperately.

bba™ is only integrated into graphic display panels (TP800, TP900 and spaTouch™). With TP600 the Aux button operation of bba™ must be used.

Basic Functions Setup 1-8

Power Requirements:

Single Service [3 wires (line, neutral, ground)] – RESTRICTED OPERATIONS (See page 5) 230VAC, 50/60Hz*, 1b, 32A, (Circuit Breaker rating = 40A max.)

Dual Service N/A

3-Service [5 wires (line 1, line 2, line 3, neutral, ground)] 400VAC, 50/60Hz*, 3þ, 16A, (Circuit Breaker rating = 20A max each phase line.)

IMPORTANT - Service must include a neutral wire, with a line to neutral voltage of 230VAC.

*BP systems automatically detect 50Hz vs 60Hz.

In 3x16A Service:

Pump 2 and Blower (if any) are on one service.

Pump 3, Pump 4, and the heater are on another service.

Everything else is on the remaining service.

HiPot Testing Note:

Disconnect slip terminal with green wires from J11 prior to performing HiPot test. Failure to disconnect may cause a false failure of the test. Reconnect terminal to J11 after successful completion of HiPot test.



Basic Functions Setup 1-8

System Ouputs:

Pump 1		2-Speed 1-Speed in neater pump i r 20 GPM thro	•	15-minute timer for High Speed, 15-Minute timer for Low Speed
Pump 2	230VAC	2-Speed 1-Speed in	11A max* Setups 2-5, 7	15-minute timer -8
Pump 3	230VAC	1-Speed	8A max*	15-minute timer
Pump 4	230VAC	1-Speed	8A max*	15-minute timer
Blower	230VAC	1 Speed Unused in S	5A max* Setups 1, 3, 5	
Circ Pump		1-Speed neater pump i r 20 GPM thro	2A max* n Setups 1–5 ugh heater	Programmable Filtration Cycles + Polling
0zone	230VAC		.5A max*	Slaved to Circ Pump in Setups 1-5 Independent in Setups 6-8
Spa Light	10VAC	0n/0ff	1A max	240-minute timer.
A/V (Stereo)	230VAC	Hot	2A max*	Always on
Heater	3.0kW @ 24	40VAC max		



^{*} These are individual maximums but depending on the electrical services they may need to be reduced. See restrictions on next page.

Basic Functions Setup 1-8

Restrictions:

In 3x16A, all equipment (if within the individual maximums listed on page 4) can run together, except the heater turns off with any high-speed pump or blower. (DIP switch A5 must be OFF.)

In 1x32A, DIP switch A5 must be ON. With DIP Switch A5 ON, only 3 pumps (any 3 pumps) can be ON at high speed at any one time, and the blower will not run when 3 pumps are ON at high speed.

In 1x40A, with DIP switch A5 ON, it works just like at 1x32A.

To be able to use 1x40A with DIP switch A5 OFF (ie, no restrictions except for the heater), all the 230V equipment used in the spa (except for the heater) must add up to no more than 39.5 Amps. This means all 4 pumps, the blower (if any), the circ pump (if any), the ozone, and A/V (if any). (There is 0.5 Amps at 230V reserved for board and panel power as well as 10V equipment including the spa lights. That is why the 230V equipment must add up to 39.5 Amps rather than 40.0 Amps.)


See this chart for some 1x40A examples:

Pump 1	11A	11A	8.5A
Pump 2	11A	11A	8.5A
Pump 3	8A	8A	7.5A
Pump 4	8A	8A	7.5A
Blower	3A	None	3A
Circ	2A	None	2a
Ozone	0.5A	0.5A	0.5A
A/V	None	None	2A
Total	42.5A	38.5A	39.5A
Will it work?	No	Yes	Yes



Hardware Setup

Wiring Diagram

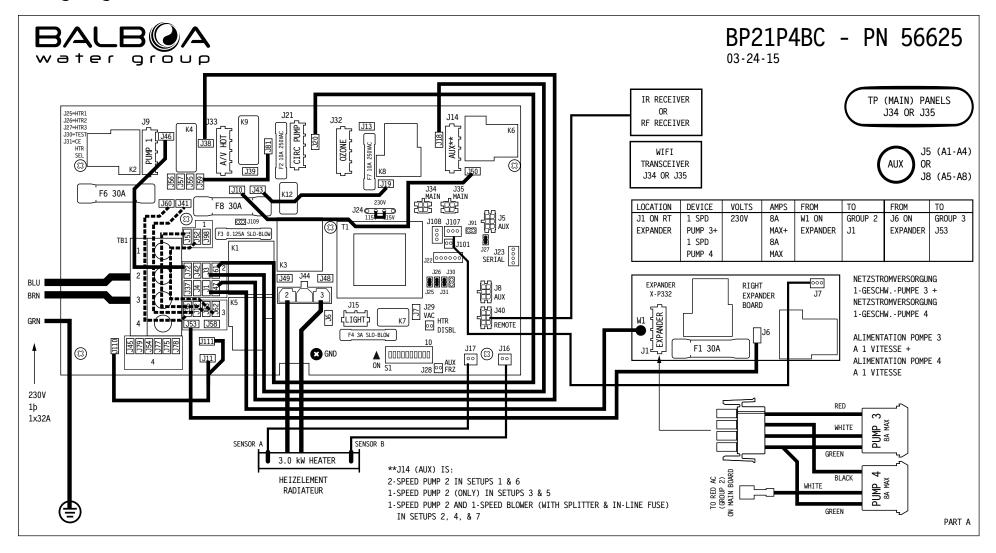




Hardware Setup

Settings

SINGLE SER	RVICE 230V 1b / 1x32A, THREE-	SERVICE 22	30V 1b / 3v	/16Λ									
LOCATION	DEVICE	JERVICE Z	50V 1P / 5A	NION .					1		SWITCHBANK S1 OFF		SWITCHBANK S1 ON
J9	NETZSTROMVERSORGUNG 2-GESCH	J DUMDE 1	AL TMENTATI	ON DOMDE 1	A 2 VITECC	EC 2 CDEE	D DUMD 1			230V 1þ	TEST MODE OFF	◀ A1	TEST MODE ON
J14	ALIX**	WPUMPE I	ALIMENTALI	UN PUMPE I	A Z VIIESS	E3 2-3PEE	ו אויוטא ע.			1x32A	DON'T ADD 1 HS PUMP W/HTR	A2 >	ADD 1 HS PUMP WITH HEAT
J14	AUX LINE 1 CONNECTION	J19 to	142								DON'T ADD 2 HS PUMPS W/HTR	⋖ A3	ADD 2 HS PUMPS WITH HEAT
J15	10V BELEUCHTUNG ECLAIRAGE E										DON'T ADD 4 HS PUMPS W/HTR	⋖ A4	ADD 4 HS PUMPS WITH HEAT
J21	KREISLAUF PUMPE POMPE DE CI			(25	ΓUPS 7-14,	16)		ı	TO	ı	SPECIAL AMPERAGE RULE A	A5 >	SPECIAL AMPERAGE RULE B
J32	OZONGENERATOR GENERATOROZON			(SE	1073 /-14,	10)		!	J14 ON	, I	STORE SETTINGS*	◀ A6	MEMORY RESET*
J32	CIRC AND OZONE LINE 1 CONNEC			to J59				TO RED AC	MAIN BOAR	. I	1 MIN HTR COOLDOWN (ELEC)	⋖ A7	5 MIN HTR COOLDOWN (GAS)
J33	TV / AV	JIIUN	J81	10 359				(GROUP 2)		_n ¦	NOT ASSIGNED	⋖ A8	NOT ASSIGNED
J40	IR RECIEVER							ON MAIN BOARD	الطلطلطال	ا لل :	NOT ASSIGNED	⋖ A9	NOT ASSIGNED
J5, J8	AUX PANEL(S) - AX10. AX20. A	AV20 AV40						i	lΠ	N	NOT ASSIGNED	◀ A10	NOT ASSIGNED
J5, J8	AUX PANEL(S) - AXIU, AXZU, A	4X3U, AX4U						ı jr	4	' i			
CETUD	OTDO DUND	DIMP 1	DUND 0	DUILED O	DUMP 4	DI OUED	TEMP	· ()		ľ i	*SWITCH # 6 SHOULD BE SET TO OFF I	JPON FINAL INS	STALLATION.
SETUP "	CIRC PUMP	PUMP 1	PUMP 2	PUMP 3	PUMP 4	BLOWER	TEMP	I	111	- 1		J60 J4	1
#							SCALE	<u> </u>	-/	- 1	230V 3þ OFF	1	_
1 PROGR	RAMMABLE FILTRATION + POLLING	2-SPEED	2-SPEED	1-SPEED	1-SPEED	NONE	°C	¥.	_	l l	3x16A ◀ A2		1
2 PROGR	RAMMABLE FILTRATION + POLLING	2-SPEED	1-SPEED	1-SPEED	1-SPEED	1-SPEED	°C	: II 🛱 I		!	■ A5 TB1		<u> </u>
3 PROGR	RAMMABLE FILTRATION + POLLING	2-SPEED	1-SPEED	1-SPEED	1-SPEED	NONE	°C	别	兒	1 :			J46
4 PROGR	RAMMABLE FILTRATION + POLLING	1-SPEED	1-SPEED	1-SPEED	1-SPEED	1-SPEED	°C	BLA GREEN	WHI TE	R '			3+0
5 PROGR	RAMMABLE FILTRATION + POLLING	1-SPEED	1-SPEED	1-SPEED	1-SPEED	NONE	°C	Ş	큐	l i	1 BRN		2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
6	NONE	2-SPEED	2-SPEED	1-SPEED	1-SPEED	NONE	°C		┐ ┌┸┸ ┸┈	L i	BLU 6		J38
7	NONE	2-SPEED	1-SPEED	1-SPEED	1-SPEED	1-SPEED	°C	I S2	S1	1	2 BRN		
8	NONE	2-SPEED	1-SPEED	1-SPEED	1-SPEED	NONE	°C	5A MAX	11A MAX	1	3 BRN		36288823
								. _L	لی وا	ι _ς ι	GRN		J53, J58
					INSTEAD	-		\		- ∕ !			J1 J1
					SETUP			i î	SPLITTER OPTI	ONS:		\$ \(\bar{2} \	J6 J
					THIS SYSTEM			i	S1 = PUMP 2	:			
					CONFIGURED			i	S2 = FUSED AD	APTER I	! =	4	
					SETU	JP #:		ı		i	L — — — — —		
								ı		Ĺ.			
								I					
								<u>!</u>			10A	В	OWER
								!			🗏 то 🚤		TUPS
								-			S2		4, & 7
								i					DNLY
								i			***FUSED ADAP	TER	
								I ± OPTIONAL I	RP2X-WIRF K	TT PN 308	393 - REQUIRED FOR SETUPS	2 4 & 7	7
								1				_ , ¬, a ,	`
FOR SUPPLY	CONNECTIONS. USE COPPER	R CONDUCTORS	S ONLY.	TOROUE RA	NGE FOR								
	TORS SIZED ON THE EMPLOYER U				IINAL BLOCK	(TB1):	\square	$\Delta \sqcup \Box$		A	BP21P4BC -	PN	56625
		CTEURS DE CL	JIVRE.	27-30 IN.	LBS.			ラー		•	חו בדו דחר	1 14	300L3

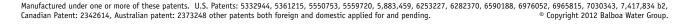

(31.1-34.5 kg cm)



PART B

water group

03-24-15

RATED MINIMUM OF 90°C.

Setup Reference Table

Setup #	Circ Pump	Pump 1	Pump 2	Pump 3	Pump 4	Blower	Temp Scale
1	Programmable Filtration + Polling	2-Speed	2-Speed	1-Speed	1-Speed	None	°C
2	Programmable Filtration + Polling	2-Speed	1-Speed	1-Speed	1-Speed	1-Speed	°C
3	Programmable Filtration + Polling	2-Speed	1-Speed	1-Speed	1-Speed	None	°C
4	Programmable Filtration + Polling	1-Speed	1-Speed	1-Speed	1-Speed	1-Speed	°C
5	Programmable Filtration + Polling	1-Speed	1-Speed	1-Speed	1-Speed	None	°C
6	None	2-Speed	2-Speed	1-Speed	1-Speed	None	°C
7	None	2-Speed	1-Speed	1-Speed	1-Speed	1-Speed	°C
8	None	2-Speed	1-Speed	1-Speed	1-Speed	None	°C

System (and any replacement board) is shipped in Setup 5

Color Key	Output									
	XP332 and Splitter									
	J14 (Aux) and splitter and in-line Blower fuse									
	J14 (Aux) on Main Board									

Changing Software Setups with TP800 / TP900 / spaTouch™ Menued Panel

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.


DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!


While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

Software Setups

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

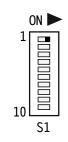

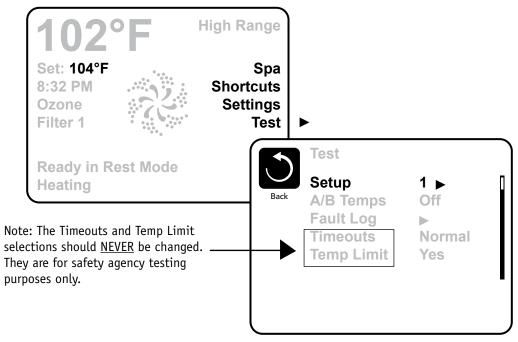



Equipment Expansion

Expansion Features Control Connection

Relay 1 (J101) Undefined None
Relay 7/8 (J107) See Below 30A

Default

1-Speed Pump 3 And 1-Speed Pump 4 (With Splitter)

Fuse

Relay 9/10 (J108) Undefined None



10

56625/56626/56627_97_B 03-24-15

DIP Switch Functions

Fixed-fuction DIP Switches

A1 Test Mode (normally Off).

A2 In "ON" position, add one high-speed pump (or blower) with Heater.

A3 In "ON" position, add two high-speed pumps (or 1 HS Pump and Blower) with Heater.

A4 In "ON" position, add four high-speed pumps (or 3 HS Pumps and Blower) with Heater.

A5 In "ON" position, enables Special Amperage Rule B. See Special Features section under Configuration Options for functionality with your system.

In "OFF" position, enables Special Amperage Rule A.

A6 Persistent memory reset (Used when the spa is powering up to restore factory settings as determined by software configuration).

A2, A3, and A4 work in combination to determine the number of high-speed devices and blowers that can run before the heat is disabled. i.e. A2 and A3 in the ON position and A4 in the OFF position will allow the heater to operate with up to 3 high-speed pumps (or two HS Pumps and Blower) running at the same time. Heat is disabled when the fourth high-speed pump or blower is turned on.

Note: A2/A3/A4 all off = No heat with any high-speed pump or blower.

Assignable DIP Switches

A7 In "ON" position, enables a 5-minute cooldown for some gas heaters (Cooling Time B).

In "OFF" position, enables a 1-minute cooldown for electric heaters (Cooling Time A).

Undesignated switches are not assigned a function.



Jumper Definitions

J109	Non Applicable on CE models	J109 🎅
J91	Real Time Clock Enable/Disable Note: This Jumper should NOT be shorted when the Control Panel can display time of day.	J91 🔯
J30	Do Not Use	
J31	Jumper on 1 pin with 2.0kW or smaller heater Jumper on 2 pins with a 3.0kW or higher heater	J31 🚱
J29	Heater Disable Switch Connection. If J29 is shorted by any means, the heater will not run until J29 is no longer shorted. If J29 is shorted during power-up "J29" will appear on the panel. The message can be dismissed with a button press, and is the only control panel notification of J29 being shorted. No message is displayed if J29 is shorted after power-up, but the heater will not run until J29 is no longer shorted.	J29 👸
	J29 expects a switch closure (not a voltage) as the command signal. In some areas, a local power company may offer discounts based on voluntary "power shedding" devices that may be installed	in conjunction with the spa.
J25, J26, J27	Heater Type Settings. Note: Factory Configured do not change.	J27 J25 [61 J26
J24	Jumper on center two pins (230V) when heater is running at 240V. Two Jumpers installed; one on left 2 pins and one on right 2 pins (115V) when heater is running at 120V.	J24

Warning!

Setting DIP switches or jumpers incorrectly may cause abnormal system behavior and/or damage to system components.

Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.

Contact Balboa if you require additional configuration pages added to this tech sheet.



Replacement Parts

PCBA:

Main PCBA: 56628 Expander PCBA: 55137

HEATER(s):

Plug + Click Heater Kit: 58300 3.0kW 800Inc

58301 3.0kW 825Inc

58302 3.0kW Titanium

Temp Sensor: 30344

CABLES: 25093 P3/P4 Adapter

FUSES:

Part Number	Amperage	Location
30136	30A	F6, F8, F1 (Expander)
20600	3A	F4
26397	1/8A	F3
30122	10A	F2, F7



General Features

Feature	Default
Pump 1 in Filter Cycle (Circ Only)	No
Pump 1 Low Timer	15 Minutes
General Pump Timer	15 Minutes
Blower Timer	15 Minutes
Mister Timer	15 Minutes
Light Timer	240 Minutes
Circ (when enabled)	Programmable + Polling
Cleanup Cycle	30 Minutes

Cleaup as Preference setting

Ozone With Heater Pump*

Ozone Suppression OFF

Pump Purge60 SecondsBlower Purge30 SecondsMister Purge5 Seconds

Purge Type Serial - Pumps at lowest speed

Blue Indicates New Custom Configuration Default (Setup 1)



^{*} The heater Pump can be either a Circ Pump or Pump 1 Low.

°C

Temperature Features

Feature Default

Temperature Display

All temperatures must be specified in °F. The system converts °F to °C dynamically. If Celsius is required for default settings, choose a desired °C value that (after rounding) corresponds to a Fahrenheit value.

°C	4	5	6	7	8	9	10	11	12	13	14	<i>15</i>	16	17	18	19	20	21	22
°F	39	41	43	45	46	48	50	52	54	55	<i>57</i>	59	61	63	64	66	68	70	72
°C	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	
°F	73	<i>75</i>	77	79	81	<i>82</i>	84	86	88	90	91	93	95	97	99	100	102	104	

Hi-Range Min. Set Temp	80°F
Hi-Range Max. Set Temp	104°
Hi-Range Default Temp*	100°
Lo-Range Min. Set Temp	50°F
Lo-Range Max. Set Temp	99°F
Lo-Range Default Temp*	70°F
Freeze Threshold	44°F

Freeze Type Rotating - Pumps at Lowest Speed

Temp Lock Type Temp + Settings

Blue Indicates New Custom Configuration Default (Setup 1)



^{*}May be changed by end-user (if enabled)

Time Features

Feature	Default
Time Format*	24 Hour
Filter 1 Start Hour*	20:00 (8:00 PM)
Filter 1 Duration*	2 Hours
Filter Cycle 2 Default*	OFF
Filter 2 Start Hour*	08:00 (8:00 AM)
Filter 2 Duration*	15 Minutes
Light Cycle	Disabled
Light Cycle Default*	OFF
Light Cycle Start Hour*	21:00 (9:00 PM)
Light Cycle Duration*	15 Minutes
Cooling Time A	1 Minute
Cooling Time B	5 Minutes

Blue Indicates New Custom Configuration Default (Setup 1)



^{*}May be changed by end-user (if enabled)

Reminder Features

Feature	Default
Reminders Shown*	Yes
Check pH	0FF
Check Sanitizer	0FF
Clean Filter	30 Days
Test GFCI	65 Days
Drain Water	100 Days
Change Cartridge	OFF
Clean Cover	0FF
Treat Wood	0FF
Change Filter	365 Days

Blue Indicates New Custom Configuration Default (Setup 1)



^{*}May be changed by end-user (if enabled)

Special Features

Feature Default

Special Amperage Rule A No Limitation

Special Amperage Rule B 3 high-speed pumps max. Blower turns off with 3 high speed pumps

Drain Mode Disabled
Demo Mode Disabled

GFCI Trip Not Applicable for CE Models

Ozone Slaved to Heater Pump Yes in circ setups

No in non-circ setups

Dual Voltage Heater Always Input Voltage

Safety Suction Disabled

TP800 Panel Configuration

Button Layout Table

Button Layout lable					
Feature	Blower & Circ	NO Blower & Circ	Blower & No Circ	NO Blower &	
#	Setups 2 & 4	Setups 1, 3, & 5	Setup 7	No Circ	
				Setups 6 & 8	
A1	N/A	N/A	N/A	N/A	
A2	Jets 1	Jets 1	Jets 1	Jets 1	
А3	Jets 2	Jets 2	Jets 2	Jets 2	
A4	Jets 3	Jets 3	Jets 3	Jets 3	
A5	Jets 4	Jets 4	Jets 4	Jets 4	
A6	Blower	Light 1	Blower	Light 1	
A7	Light 1	Invert	Light 1	Invert	
A8	Invert	(Circ Icon)	Invert	Undefined	
A9	(Circ Icon)	Undefined	Undefined	Undefined	
A10	Undefined	Undefined	Undefined	Undefined	
A11	N/A	N/A	N/A	N/A	
A12	N/A	N/A	N/A	N/A	
A13	Jets 1	Jets 1	Jets 1	Jets 1	
A14	Jets 2	Jets 2	Jets 2	Jets 2	
A15	Jet 3	Jet 3	Jet 3	Jet 3	
A16	Jet 4	Jet 4	Jet 4	Jet 4	
B1	Jets 1	Jets 1	Jets 1	Jets 1	
B2	Jets 2	Jets 2	Jets 2	Jets 2	
В3	Blower	Jets 3	Blower	Jets 3	
B4	Light 1	Light 1	Light 1	Light 1	

Overlay Part Number 12512.





Button labled "AUX" controls Blower in Setups 2, 4, & 7, and controls Jets 3 in all other Setups.




TP800 Panel Configuration


Spa Screen

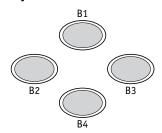


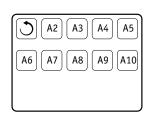


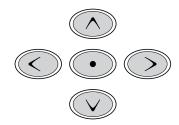

Shortcuts Screen

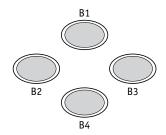

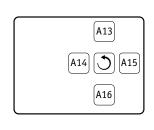

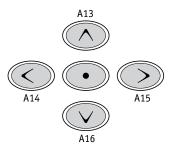

Note: Buttons 11 and 12 are not used in this configuration.

Button 1 is fixed.

A Circ Icon will appear when a Circ Pump is configured.



TP900 Panel Configuration


Button Layout Table

Feature	Blower & Circ	NO Blower & Circ	Blower & No Circ	NO Blower &
#	Setups 2 & 4	Setups 1, 3, & 5	Setup 7	No Circ
				Setups 6 & 8
A1	N/A	N/A	N/A	N/A
A2	Jets 1	Jets 1	Jets 1	Jets 1
А3	Jets 2	Jets 2	Jets 2	Jets 2
A4	Jets 3	Jets 3	Jets 3	Jets 3
A 5	Jets 4	Jets 4	Jets 4	Jets 4
A6	Blower	Light 1	Blower	Light 1
A7	Light 1	Invert	Light 1	Invert
A8	Invert	(Circ Icon)	Invert	Undefined
A9	(Circ Icon)	Undefined	Undefined	Undefined
A10	Undefined	Undefined	Undefined	Undefined
11	N/A	N/A	N/A	N/A
12	N/A	N/A	N/A	N/A
13	Jets 1	Jets 1	Jets 1	Jets 1
14	Jets 2	Jets 2	Jets 2	Jets 2
15	Jets 3	Jets 3	Jets 3	Jets 3
16	Jet 4	Jet 4	Jet 4	Jet 4

A Circ Icon will appear when a Circ Pump is configured.



TP900 Panel Configuration

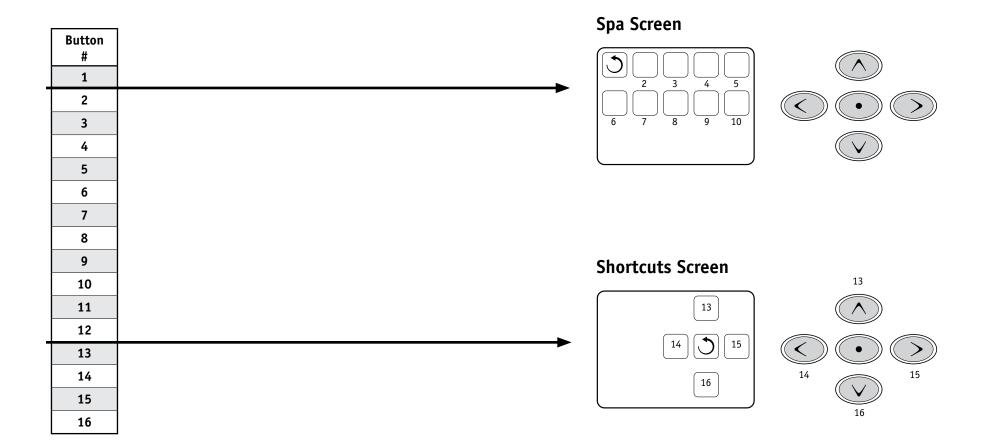

Auxilliary Panel Features on Bank 1*

Feature	Default
Aux Button A1	Jets 1
Aux Button A2	Jets 2
Aux Button A3	Blower
Aux Button A4	Light

Auxilliary Panel Features on Bank 2*

Feature	Default
Aux Button A5	Jets 1
Aux Button A6	Jets 2
Aux Button A7	Jets 3
Aux Button A8	Jets 4

Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.

*Bank 1 consists of J5 on the Main Circuit Board.

Bank 2 consists of J8 on the Main Circuit Board.

Aux Connection Splitter PN25257 may be required.



Auxilliary Panel Features

AX10 Panels on Bank 1*

A1, AX10A1	No O/L	52803
A2, AX10A2	No O/L	52804
A3, AX10A3	No O/L	55805
A4, AX10A4	No O/L	52806



Call Customer Service for additional information about Auxiliary Panels.

Auxiliary Panel Part Number	
Overlav Part Number	

*Bank 1 consists of J5 on the Main Circuit Board.

Bank 2 consists of J8 on the Main Circuit Board.


Aux Connection Splitter PN25257 may be required.

AX10 Panels on Bank 2*

A5, AX10A1	No O/L	52803
A6, AX10A2	No O/L	52804
A7, AX10A3	No O/L	52805
A8, AX10A4	No O/L	52806

AX20


AX20 A1A2	No O/L	52800
AX20 A1A3	No O/L	52801
AX20 A1A4	No O/L	52802

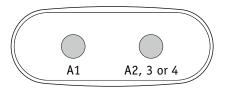

AX20 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 or A4. AX20 Auxiliary Panel plugged into Bank 2 will operate A5 + A6, A7 or A8.

AX40

AX40 No 0/L 52799

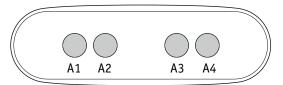

AX40 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 and A4. AX40 Auxiliary Panel plugged into Bank 2 will operate A5 + A6, A7 and A8.



Remote Panel Features

Feature	Default
Remote Button A1	Jets 1
Remote Button A2	Jets 2
Remote Button A3	Undefined
Remote Button A4	Jets 3
Remote Button A5	Jets 4
Remote Button A6	Undefined
Remote Button A7	Undefined
Remote Button A8	Undefined



Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.

Template 56377 10-05-12

Remote Panel Part Number

Overlay Part Number